


# Typical 12 foot H2O Screen install

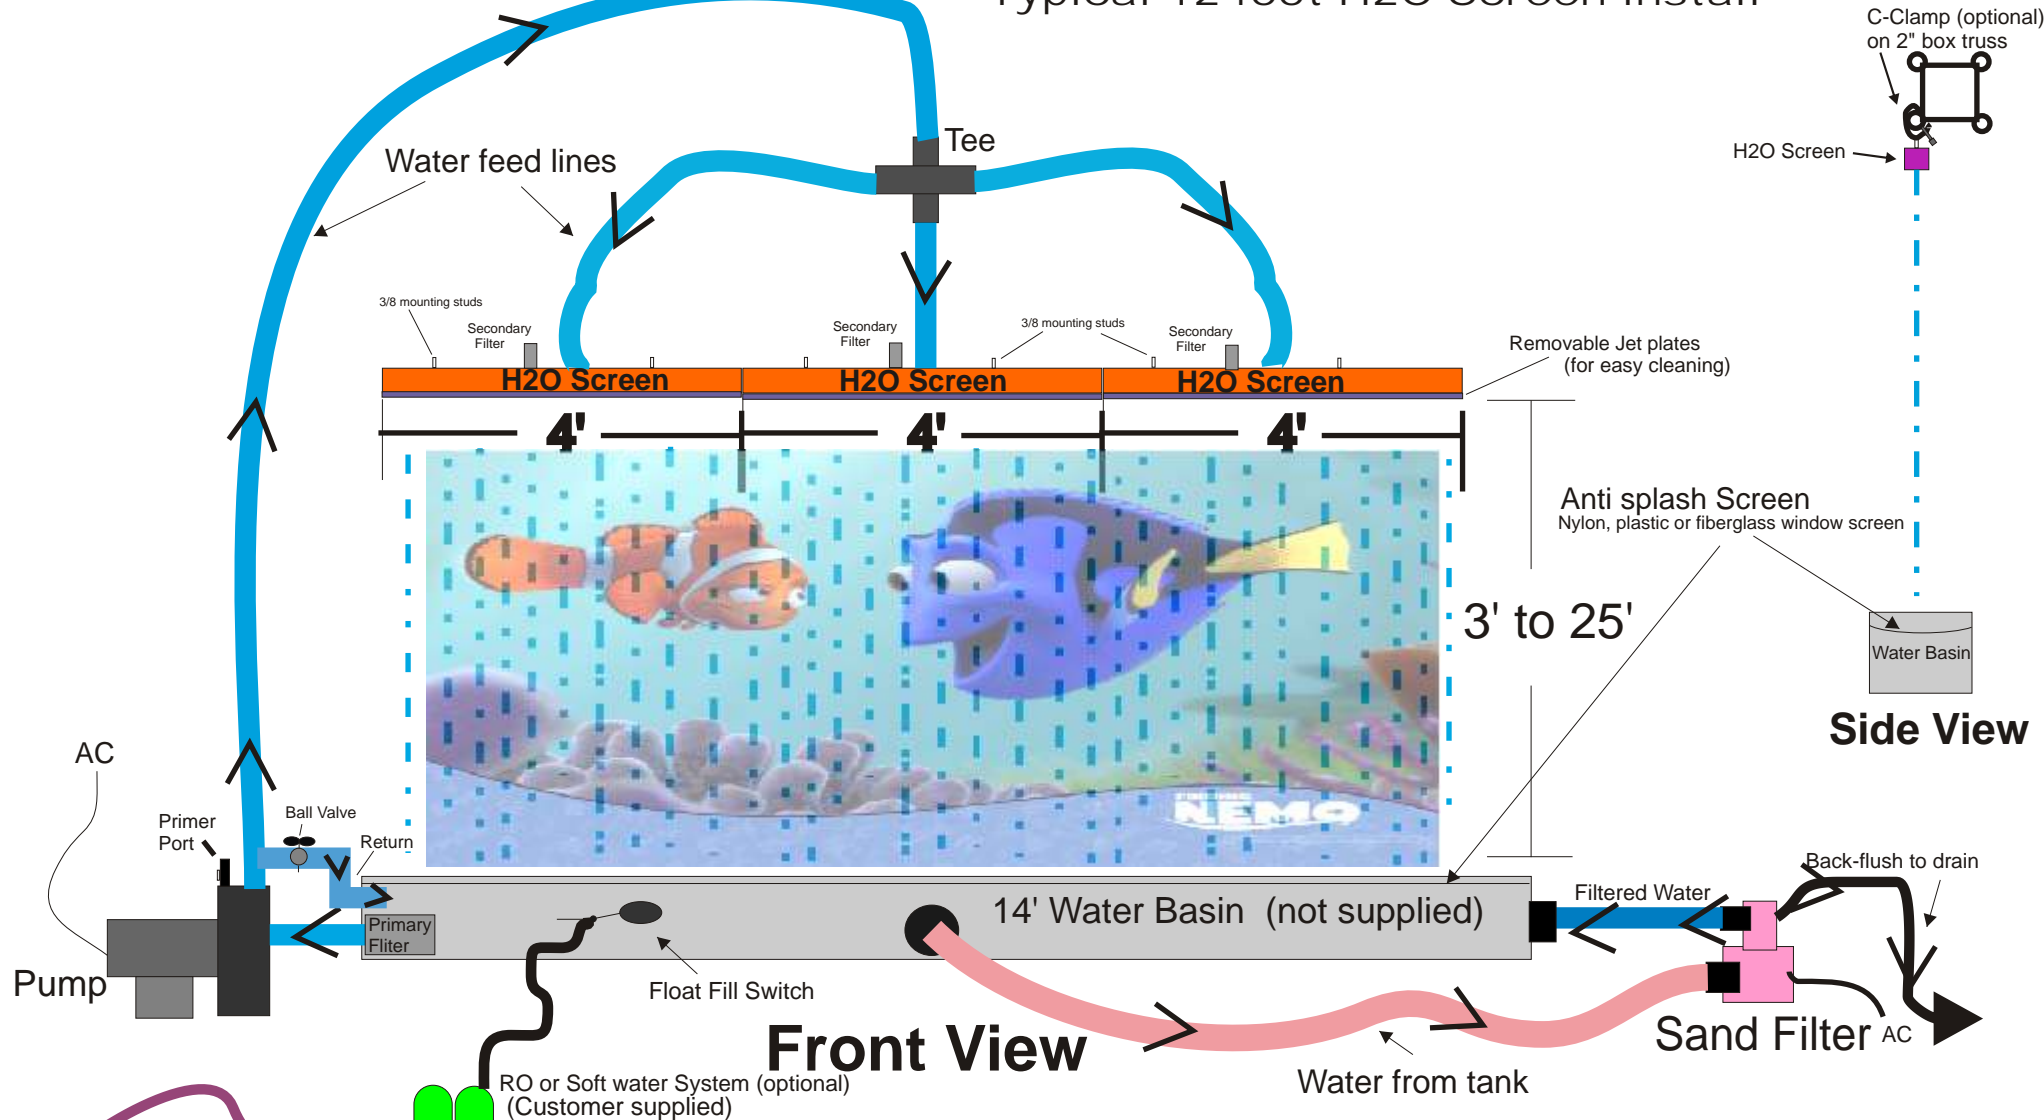

## Front View

## Side View

### Notes;

- Systems should use Soft or RO (Reverse Osmosis) to ensure long life of system. Beware of the dreaded **HARD WATER!**
- System should be installed by **qualified plumber.**
- Never run pump dry, pre-prime pump, this will lubricate seals.
- PSI at heads should average 15-25 psi depending on height.
- When building catch basin, allow for water widening as it falls, as a rule of thumb start with two feet wide for first ten feet of height adding one foot for each additional ten foot of drop.
- As in all water product, expect patrons to play in the water and there to be some splash and or misting!